VENUE BUTLER

Introducing your new taxi booking device



Press the button to order a taxi
A taxi will be ordered immediately.
Press the button again to order
another taxi simultaneously.

2 See when the taxi is arriving
As soon as a driver accepts the order,
an estimated time of arrival will be
displayed. The booking will turn
green once the driver is outside.





Cancelling a taxi

Simply press the **X** button to cancel the most recent taxi.